

SAFE INSTRUCTION MANUAL

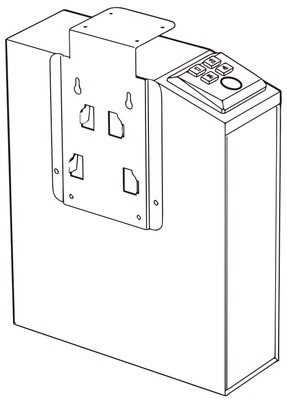


CONTENTS

Product Details..... I
Specifications..... II
Adjusting the Foam..... III
Battery Installation..... IV
Battery Warnings..... V
Low Voltage Alarm.....VI
Setting Password and Fingerprint..... VII
Important Tips..... VIII
Opening the Door with Password..... IX
Open the Door with Fingerprints..... X
Error Alarm..... XI
Restore Factory Settings..... XII
Mute Function..... XIII
Installation of Mounting Bracket XIV
Simple Fixation..... XV
Installation Method..... XVI
Disassembly Steps XVII
Assembly Steps..... XVIII
Car and maintenance.....XVIX

I. Product Details

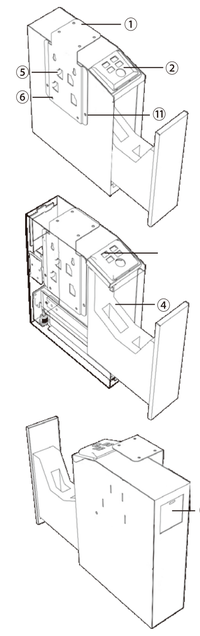

① Mounting Bracket
② Panel (Buttons & Biometric Scanner)
⑤ Mounting Hook Holes
⑥ Plug Nut Holes
⑪ Fixed Holes



③



③ Physical Keyhole
④ Buttstock Foam
⑫ **Setting Key**
(Under Button 1 inside the safe)



⑧ Mounting Screw x 4
⑨ Thumb Screw x 2
⑩ Backup Key (2)

⑦ Battery Compartment


II. Specifications

Item	Handgun Safe
Model	T3
Net Weight	12.1lb/5.5kg
Dimensions	3.5*10*11.8H inches (W*D*H)
Battery Voltage	DC 6V (4x AA batteries needed)
Password Length	3-6digits
Standby Current	10ua
Operating Current	150ma
Operating Temperature	-4°F-158°F(-20°C-70°C)
Warranty Period	1 Year

III. Adjusting the Foam

There are two slots in the foam inside the gun safe. Before installing the gun safe, insert the pistol to test on the foam. If the slots are not suitable please refer to the following solution:

1. Take out the foam in the safe (Initial Password: 1234);
2. Cut the slots in foam to fit the size of your gun;
3. After adjusting the slots, install the foam into the safe to ensure the gun is stable.

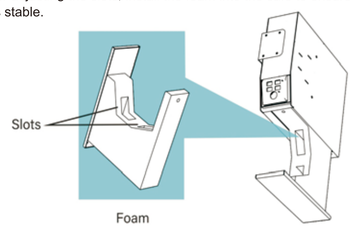

IV. Battery Installation



1. Prepare 4 AA alkaline batteries (not included);
2. Remove the battery compartment cover and place the 4 batteries into the compartment indicated by the "+" and "-" signs;
Pay attention to the "+" and "-" signs. The end of the batteries go against the springs inside the compartment.
3. After confirming the installation is correct, cover the battery compartment.
4. Repeat the above steps for battery replacement.

V. Battery Warnings

- Always install batteries correctly as indicated by the polarityiesy ("+" and "-") marked on the battery and the product.
- Exhausted batteries should be immediately removed and disposed properly.
- Dispose of the used battery in accordance with instruction.
- Do not charge the battery or disassemble it.
- Do not directly heat or incinerate the battery.
- Improper use of batteries may lead to battery leakage, which may damage surrounding parts and pose a risk of fire, injury and accidents.

VI. Low Voltage Alarm

If the battery power is lower than 4.8V, press any number of the password input panel or input any fingerprint, the alarm sounds 5 times to remind the user of the low voltage for replacement in order to open the door normally next time.

VII. Setting Password and Fingerprint

1. Password setting:
In standby mode, press and hold the setting key for 2 seconds until the buzzer beeps twice and the blue light flickers twice, and the password key light is on in the meantime, then enter a new password of 3-6 digits. After entering the password, **press the setting key again and a beep is heard twice, meaning the operation is successful.** If three beeps are
heard, the password setting is failed. To reset the password after the failure, you need to start from the first step.
Note: After the setting key is pressed, you have 10 seconds to set a new password. If the password is not successfully set within the period, the setting will fail. You need to press the setting key again to start set your password.

2. Fingerprint setting (30 fingerprints can be set):
In standby mode, press and hold the setting key for 2 seconds until the buzzer beeps twice and the blue light flicker twice, and the scanner area light is on in the meantime, then release the setting key, put your finger onto the fingerprint zone, and press it for 4 times, each time you input the fingerprints, the buzzer beeps once and the blue light flicker once, and after repeating it four times, the buzzer beeps twice, meaning the fingerprint setting is successful. If the buzzer beeps three times, it means the setting is failed. You need to press the setting key to reset the fingerprint.

VIII. Important Tips

1. Setting key description: Press the setting key for 2 seconds, the buzzer beeps twice, the blue light is on, and you can set the fingerprint or password.
2. Factory setting: Initial password: "1234". Initial fingerprint: The gun safe cannot be opened if no fingerprint information is set. Sound: on.
3. The digital password you set has 3-6 digits (46656 combinations at most). If the password has less than 3 digits or more than 6 digits, the setting will fail. Note: A new password will overwrite the old one; number of fingerprints: 30.
4. If the password is set while no fingerprint is set, the new password can be used to open the gun safe, but any fingerprints will not be valid at this point. On the contrary, if the fingerprint is set but no password is set, the original factory password "1234" will be invalid. (If the password set by the user is 1234, the door will be opened normally.)
5. For ease use, you are advised to set a new password and fingerprint.
6. To improve your success rate, register several fingerprints for a single finger at different locations in the scanner ¨ left, right, up, and down. Do not scan any finger that has moisture, lotion, or dirt.

IX. Opening the Door with Password

1. The door will open rapidly and automatically if the correct password is entered.
2. The buzzer will beep three times if a wrong password is entered.

X. Open the Door with Fingerprints

1. Put your finger on the fingerprint scanner. If the fingerprint matches the information recorded by the system the door will open rapidly.
2. If the fingerprint doesn't match the information recorded by the system, the buzzer beeps three times and the red light is on.

XI. Error Alarm

The panel will be locked for one minute and the buzzer will alarm for 30 seconds consecutively if the wrong password is entered for three times or the incorrect fingerprint is input for five times.
All passwords/fingerprints will be invalid during the alarm period. After the alarm ends, you can try it again.
If wrong information is entered again, the alarm time will be longer. You are advised to remove the batteries and reinstall them. (Refer to IV, Battery Installation for details)

XII. Restoring Factory Settings

Press and hold the setting key for more than 6s (the blue light flash and the buzzer beeps twice at 2nd second) until the buzzer beeps for 2s. The initialization is successful—the fingerprints are cleared & password set to "1234".

XIII. Mute Function

In standby mode, press the key of numeric keypad #4 for 4 seconds before the blue light turns off, then the mute setting is successful. Repeat the above steps to turn on the sound again.

XIV. Installation of Mounting Bracket

The mounting bracket mounting bracket has eight holes, which can be selected per your needs.
1. If you need to secure the safe under items such as a table, select the four holes in the horizontal plane of the mounting bracket (Figure 1) and use mounting screws to fix the bracket to the table.
2. If you need to secure the safe to the side of items such as a table, select the 4 holes in the vertical plane of the mounting bracket (Figure 2) (The top two holes are the main stress holes) and use the mounting screws to fix the bracket to the table.

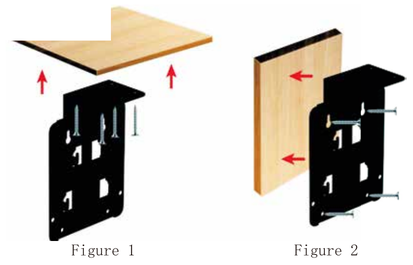


Figure 1 Figure 2

Note: If only the top two holes on Figure 2 are used, the bracket can be moved from the table. For your safety, you should fix the bottom two holes as well.

XV. Simple Fixation

Align the four holes of the safe with the four hooks on the mounting bracket. Swinging lightly without falling off indicates the operation is successful.
This way is convenient for the safe to be carried separately for the mounting bracket at any time. If you need to lock the mounting bracket with the safe, refer to the following methods.



XVI. Installation Method

Step 1: After fixing the safe with the mounting bracket, open the safe and reach inside of the safe to find the hole on the safe as shown.
Step 2: From the inside of the safe, use the thumb screw clockwise to fix the mounting bracket with the safe as shown.



Step 3: After fixing it, close the door and gently shake the mounting bracket to ensure it stability.

If you want to remove the mounting bracket, repeat the above steps.

XVII. Disassembly Steps

Step 1: Open and lay the safety box flat as shown in the figure, and find the two clips on the surface and side. (Figures 1-2)

Step 2: Move and secure the two clips in the direction of the arrow, then gently pull outwards until it reaches the outermost position and stop.



figure 1

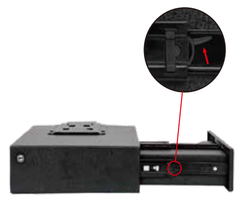


figure 2

Step 3: Gently press down on the iron wire and pull it outward to separate the main body of the gun box from the shell of the safe. (Figure 3)

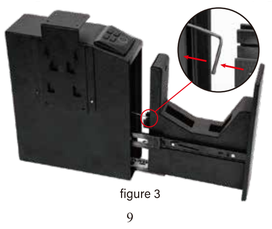


figure 3

XVIII. Assembly Steps

Step 1: Stand the safe upright and find the iron wire and the holes on the main body of the gun safe. (Figure 1)
Step 2: Place the unlocking panel towards yourself, hold the main body of the gun box with your left hand, and pass the iron wire through the small hole with your right hand.
Attention: Only pass through the leftmost small hole. (Figure 2)
Step 3: Slightly tilt the main body of the gun safe to pass the iron wire through the small hole. (Figure 2)
Step 4: Check if the gun box is aligned with the slide rails, and after confirming alignment, push the gun box to close it.

Note: The step 4 requires force

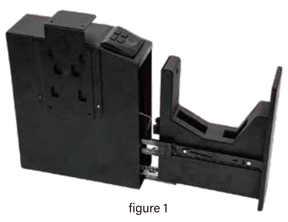


figure 1

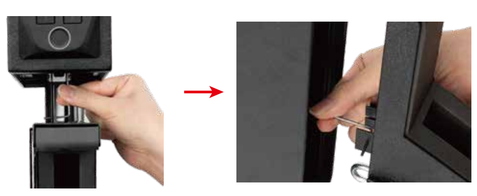


figure 2

XVIX. Care and Maintenance

※ To maximize the safety and performance, keep the fingerprint scanner clean; After each use, use dry cloth to remove any stains from the fingerprint scanner.

※ Please register fingerprints every six months.

※ Keep liquids away from the password input panel. Spills on the password input panel may cause damages.

※ Ensure safety in appropriate areas.

※ Do not disassemble the product. If repair service is needed, please contact our support teams.

※ Clean it with a wet cloth. Do not use chemicals or detergents to clean the safe.

※ Use new AA alkaline batteries only.

※ Keep the keys and this file out of the reach of children! Never put a key in a safe!

Thank you for choosing Our Gun Safe!